

## 893MAX-230 Remote Manual

1st, Press and Hold the AB button at the same time till the led indicator flash 4 times then off. During this time, within 8 seconds, choose the remote type you want:


2nd, Press and Release the remote control button you wish to use the number of times that corresponds with the garage door opener type

# of presses	Garage door opener type
1	Security+2.0 (Yellow Learning Button)
2	315MHz Security+ (Purple Learning Button )
3	390MHz Security+ (Red or Orange Learning Button )
4	390MHz Billion Code (Green Learning Button)


For example: you want to set A button to be Security+2.0 type, press and release **A button** 1 time, led indicator light on and off, then press and release 1 time **another button** to fixed the A button code you need. (except A button, any button you press 1 time can fixed A button code)

If you want to set **B button** to be 315MHZ Security+ purple learning button, press and release **B button** 2 times, LED indicator light on and off, then press **A or C or D button** 1 time to fixed the B button code. Such like this to do other C D button.

## PROGRAMMING THE REMOTE CONTROL

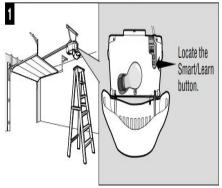



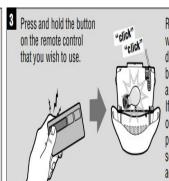

Release the button when the garage door opener lights blink or two clicks are heard.

If programming to other products, press the button a second time to activate the product.