



# E960 Remote Manual

1st, Press and Hold the 23 button at the same time till the led indicator flash 4 times then off. During this time, within 8 seconds, choose the remote type you want :

2<sup>nd</sup>, Press and Release the remote control button you wish to use the number of times that corresponds with the garage door opener type

# of presses	Garage door opener type
1	LIFTMASTER TX4/MERLIN+2.0
2	LIFTMASTER 9 series/ MERLIN+
3	LIFTMASTER/BND 4 series

For example: you want to set No.2 button to be MERLIN+2.0, press and release No.2 button 1 time , led indicator light on and off , then press and release 1 time another button to fixed the No.2 button code you need. (except No.2 button ,any button you press 1 time can fixed No.2 button code)

If you want to set No.3 button to be liftmaster 94335E , press and release No.3 button 2 times, LED indicator light on and off, then press No.2 or No.1 button 1 time to fixed the No.3 button code . Such like this to do other No.1 button .