

For M842/M832 Remote Instruction

Your receiver or opener must learn the button from this remote control.

1. Find the learn button

On overhead door openers:

- a) With five exposed terminal screws at the rear
 - Remove the small black cover to the right of the terminal screws.
 - Learn is the **RED** button under the black cover
- b) With four terminal screws at the rear, possibly covered with a plastic panel
 - Remove the lamp cover; remove the **red** or **green** control panel cover.
 - Find the small button marked 'Learn'
- c) With four covered terminal screws at the rear, and a M832 wired wall switch
 - The small button on the M832 wall switch is the Learn button

On Roller door openers:

- a) Single small square RED button on the front
 - Remove the lamp cover; remove the small black cover to the left of the lamp holder.
 - Learn button is the RED button under the black cover
- b) Large RED or GREEN push switch on front
 - Remove the red or green control panel cover
 - Find the small button marked "Learn"
- C) Large RED or Green push switch on front and a Merlin wired wall switch
 - The small button on the Merlin wall switch is the Learn button

On other Receivers:

- a) Dark Grey boxed receiver with a large round GREEN button
 - The Learn button is the small dark Grey button inside the Green button
- b) Gate receiver cards
 - The Learn button is the tact switch on the pcb marked "Learn"
- c) Others
 - See your receiver's user guide, or inspect and find a button marked "Learn"

2. Teach the remote to the opener or receiver

- Press and hold the Learn button for 1-2 seconds
 - Press the desired remote control button three times or more
- NOTE:** If you want to control the lamp on your opener (if fitted):
press the desired button for the secondary function:
- Press and hold the Learn button for 1-2 seconds
 - Press the desired remote control button once for the main function (open door)
 - Press the desired remote control button once for the secondary function (control lamp)