

76 LM Garage door wired open button Instruction

Please read all instructions carefully before using this product. If you have any questions, please contact us in time.


Accessories	Parameter	Quantity
Garage door button	2.8 x 0.71 x 0.71 inches	1
Connector	DC	
color	white	
Light Color	green	1
Compatible system	Universal	
Screws	silver	2
model	76LM	
manual		1

***76LM Lighted Push Button Compatible with all garage door openers that have working push button terminals**




① Unscrew the screws on the circuit board and connect the wires. Then tighten the screws.

② Connect bell wire to terminals as follows:

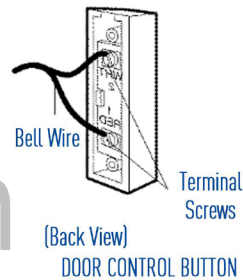

③ Remove the front shell of the product, and fix the button on the wall with screws.

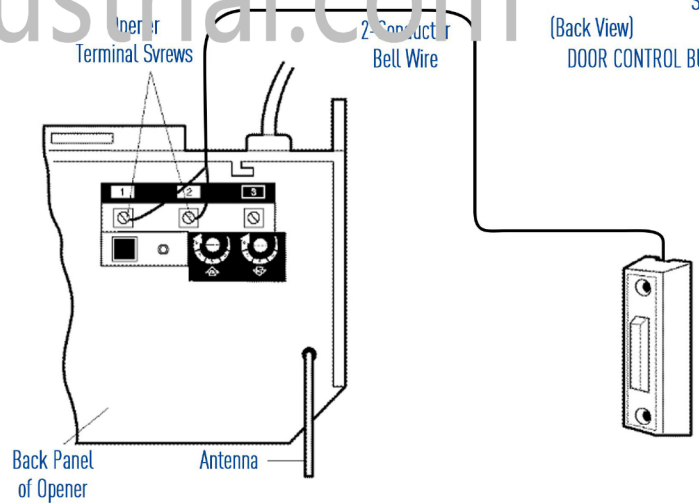

WARNING ⚠ :

To prevent possible **SERIOUS INJURY** or **DEATH** from electrocution:

- Be sure power is **NOT** connected **BEFORE** installing door control.
- Install door control within sight of garage door, out of reach of children at a minimum height of 5 feet (1.5m), and away from **ALL** moving parts of door.

④ Close the front cover of the button.

