

尺寸: 53\*95mm

SUNUO

Visual Water Flosser

CMIIT ID 2021DP12005

Products

The machine is new coming visual water flosser with camera, its feature is to connect smartphone/ iphone/ mac, you can record video or take photos from APP when you use it, very convenient and efficient to clean your teeth.



Work button introduction

Top button

- 1. Long press 2-3 seconds to turn on/off camera, device will transmit/ close wifi signal( device will be automatically turn off after wifi close)
2. Short press turn on/ off water aspirator( you have to hand control the button to wake water aspirator which keep in stay status)

Bottom Button

- 1. Long press 2-3 second, sterilizing light turn ON/OFF ( it will automatically close after 2 minutes)
2. Short press to choose working modes, then press top button to start it.

Wifi signal

- 1. Wifi unconnection, green light flicker
2. Wifi connection, green light constant

Charge indicator

- Low battery: red light flash
Charging: red light on constant
Full charge: blue light on constant

Work modes indicator

- Gentle mode: Better for fresh man or teeth sensitive users
Standard mode: Better for frequent users
SPA mode: Make teeth massage

Turn on camera cleaning mode


Step 1: Download and install the app

Attention: it will pop up a permission request when you install APP, please agree it to recognize device Wifi ID



Step 2: Add and connect device

- 1. Long press to open device, find "+" get into C3 Pro

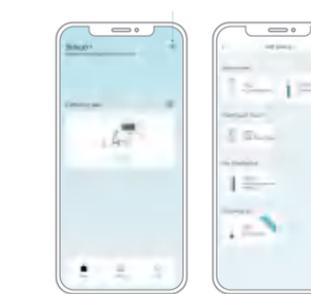

2. Follow step by step instruction into your phone settings-WLAN, find wifi ID: SUNUO-C3 Pro-XXXX



3. Get back the viewfind interface after wifi connect successfully



4. APP Viewfinder interface



- 1. If green light flash, it indicate Wifi is unconnected, please connect Wifi from phone settings (SUNUO-C3 Pro-XXXX)
2. when screen frozen, black or wifi signal missing, you can try charge device or reinstall APP
3. When photos unclear, you can clean camera

Step 3: Water intake guide


- 1. Pull up device body to mark line ( waterproof location)



- 2. Open the cover of water intake



- 3. Pull up irrigator nozzle

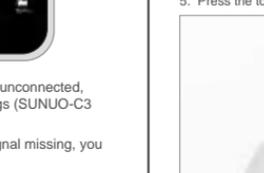

- 4. Press the bottom button to select work mode



Step 4: Replace the nozzle

Suitable nozzles can be selected for use



Caution

Please tighten the nozzle before use

It is recommended to use clean tap water or pure water. If you feel the water is low, you can use warm water not exceeding 40°C. You can also fill it with saline water under 5%, diluted mouthwash, etc.

How to use

Holding the flosser in your hand, reach the nozzle into your mouth against and perpendicular to the gap or gums and clean slowly moving it in sequence along the teeth.

- Open your mouth slightly when cleaning so that the water can flow out smoothly after cleaning
● Do not use the nozzle to press hard on the gums or teeth
● Do not spray water directly on periodontal pockets, it may cause bleeding gums

Charging instructions

- 1. When using the product for the first time, please charge the product until it is full before use.
2. Before charging, please make sure that both the product and your hands are in a dry state, insert the charging cable into the charging port and connect the power plug. (Recommended power plug with 5V1A output)
3. When the power is turned on, the red light flashes to indicate that it is charging, the blue A long light indicates that charging is complete.
- Red light blinks to indicate low battery and needs to be charged
- Takes about 3 hours to fully charge
- Use of this product during charging is prohibited



Troubleshooting

- 1. Battery indicator get red light: In low battery status, please try it again when full battery
2. Irrigator power get weak: may be low battery, please try it again when full battery
3. Cann't connect device Wifi ID ( SUNUO-C3 Pro-XXXX): Please restart device, or close wifi to connect again
4. APP interface close: Please clean your phone random access memory
5. When screen frozen, black or wifi signal missing, You can try charge device or reinstall APP
6. When photos unclear: You can clean camera

Product Parameters

Table with 2 columns: Parameter and Value. Includes Product Model (C3 Pro), Item Size (157\*61, 5\*47mm), Constant voltage (5V), Constant Power (10.9W), Test standard (GB4706.59-2008 GB4706.1-2005), Work modes (3 levels), Work temperature (5-35), Open mode (Button control), Indicator mode (Light), Max water storage (180ml), The range of water press (35-140PSI), Irrigator mode (Pulse), Waterproof rate (IPX7), Battery indicator (Red light flash), Work time (45 days ( 1 minute/ 1 time/ 1 day)), Charge time (3h), charge current (1A), Battery specification (2000mAh), charge cable (Type-C), Noise (Less 75dB)

Safety Precautions

Statement

You may experience tingling or slight bleeding when using this product for the first time, this is due to Gums are not yet used to this efficient way, it is recommended to use this product in gentle mode first to clear Cleanliness. This usually stops within 1-2 weeks. If the above phenomenon does not occur for more than two weeks If you see significant improvement, stop using this product and consult your dentist promptly.

Warning

- 1. Users of orthodontics, dental repair, dental implants, etc. should use under the guidance of a dentist
2. This product is designed to clean the mouth and should not be used for any other purpose. Use process If you feel any discomfort or pain, stop using the product and consult your dentist promptly.
3. Please do not fill the tank with hot water above 40 and clean the mouth to avoid scalding
4. If you drop the product into the water while charging, please unplug it first before pulling it out.
5. If the power plug or power cord is damaged, please replace it and use it
6. Do not put the product into the fire to heat prohibit

Prohibit

- Do not press the nozzle hard on the gums or teeth to avoid damage to the gums teeth
2. Please do not immerse this product in water for a long time to avoid failure
3. Do not clean any place other than the mouth to avoid injury
4. If you need to charge, please make sure the power plug and the interface are completely dry before connecting to the power supply.
5. This product contains a built-in rechargeable battery, please do not put it into the fire to heat or in the high temperature Charge, use or leave in place
6. Please do not knock or drop this product. If the product is damaged by bumping or dropping, please stop using
7. Do not modify, disassemble or repair this product by yourself

Important

- 1. Check for obvious damage before using this product. Do not use if it is damaged or if the machine is badly dropped
2. Please check whether the local power supply voltage is in line with the voltage marked on the product before you connect the power supply.
3. If there is any damage to the charging port or charging cable, please do not use it
4. Do not place the product in a hot or humid place, and avoid direct sunlight
5. Do not use this product in the shower or bath
6. Before maintenance, please ensure that the product is not charged and shut down

Reminders

- 1. Do not share nozzles with others
2. Do not use this product without the nozzle installed
3. Please do not fill this product with pure mouthwash, if you need to use mouthwash, please dilute it according to the proportion before filling
4. Do not wrap the power supply around the product while it is powered on
5. Persons (including children) who do not have full civil capacity or who lack relevant experience and knowledge must use, clean and maintain the product under the supervision and guidance of a supervisor

The illustrations of products, accessories, user interface, etc. in the instruction manual are all schematics for reference only, due to product updates and upgrades, the actual product and the schematics may differ slightly, please prevail with the actual product