


IT 421 Water and electricity
installation drawing

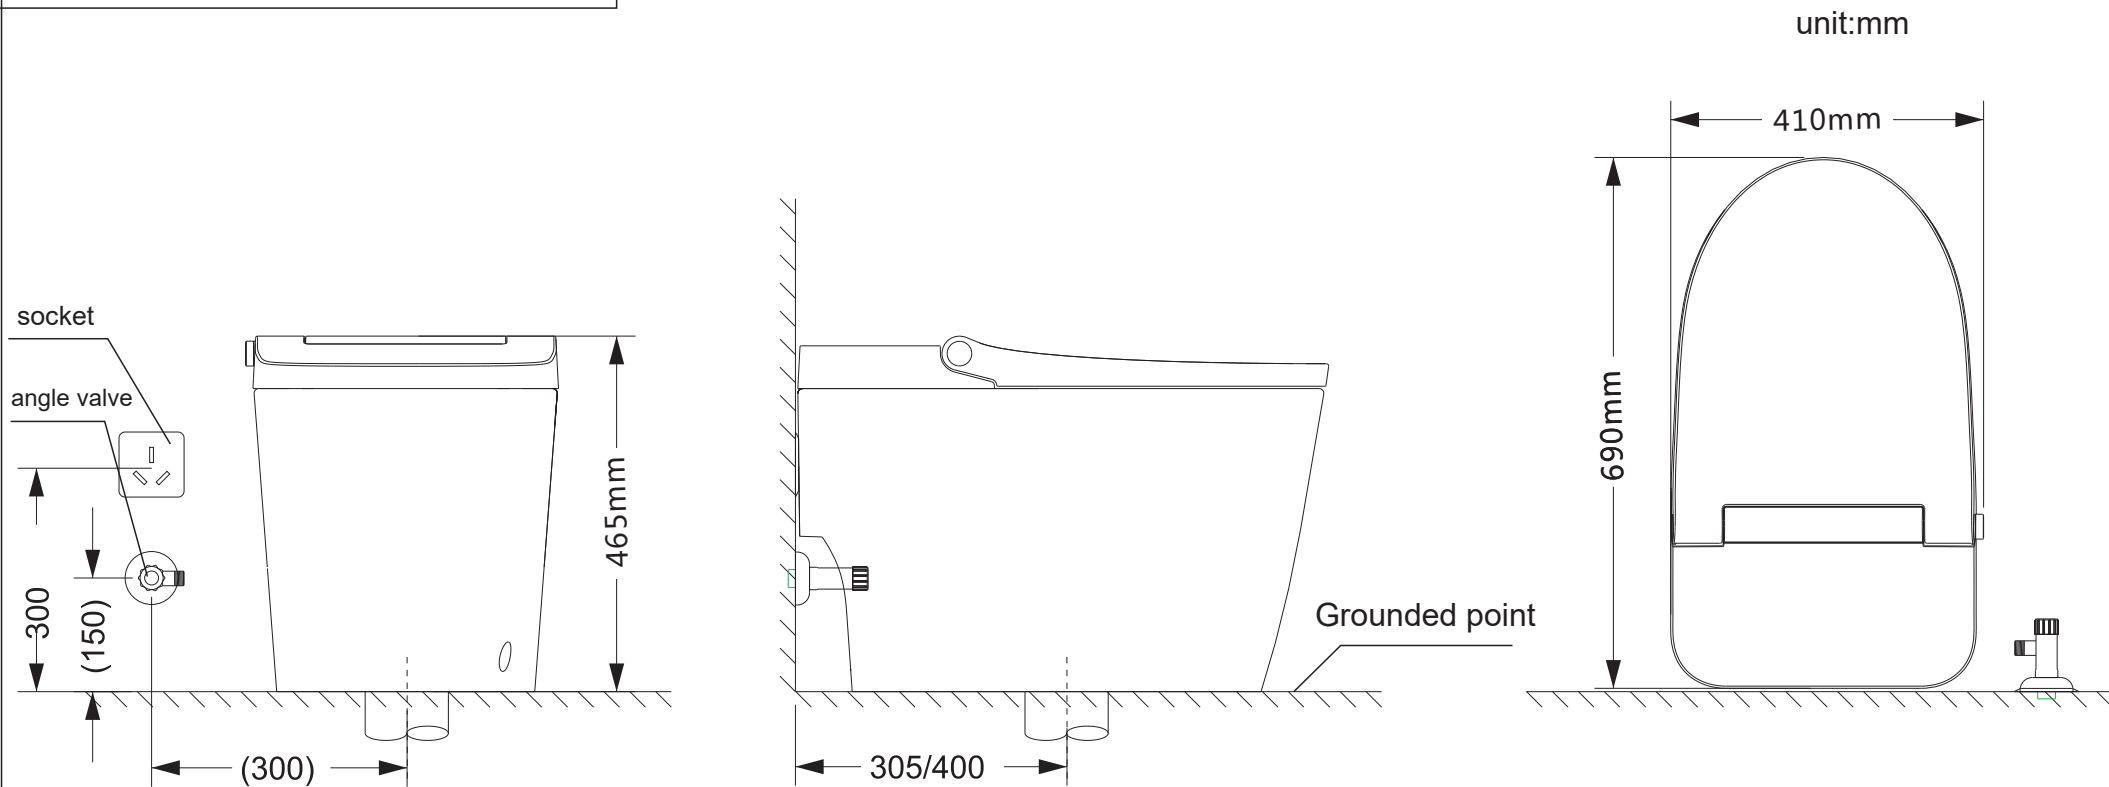

Remark:

- 1.The size in parentheses is the recommended size, and the actual installation size can be adjusted according to the field situation;
- 2.Sockets and corner valves can be installed on the left and right sides of the toilet; waterproof after the plug into the socket;
3. Please use the new angle valve with the product; When connecting pipes, ensure that the pipes are not twisted or blocked..